

Dear customer,


Please find useful information to install your device.

Please remember: your router must always be switched on to enable your telephone to work.

Connecting the FRITZ!Box 7360/7460


1

Connect the power supply unit to the socket on the FRITZ!Box labeled "Power". The "Power/DSL" LED begins flashing after a few seconds.

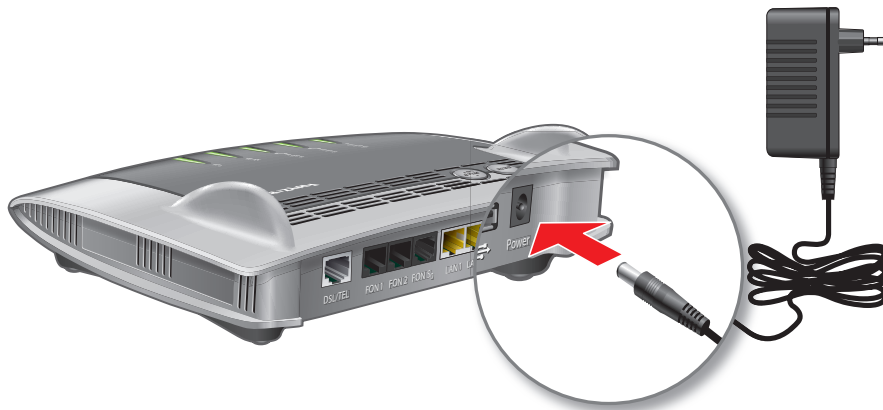


2

Please make sure that filters are disconnected from the telephone socket. The DSL cable has to be plugged in directly to the telephone socket. Connect the small end of the DSL cable with the telephone socket and the bigger end with the FRITZ!Box (labeled "DSL/TEL").

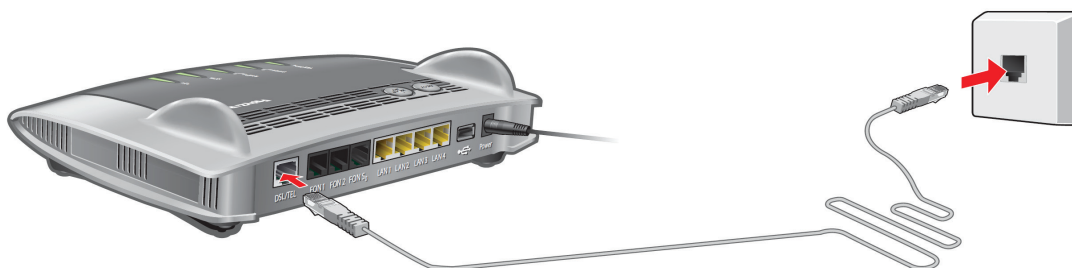

3


Analog telephones must be connected to the sockets labeled "FON 1" and "FON 2" on the FRITZ!Box. If you have an ISDN telephone, connect it to "FON S0".

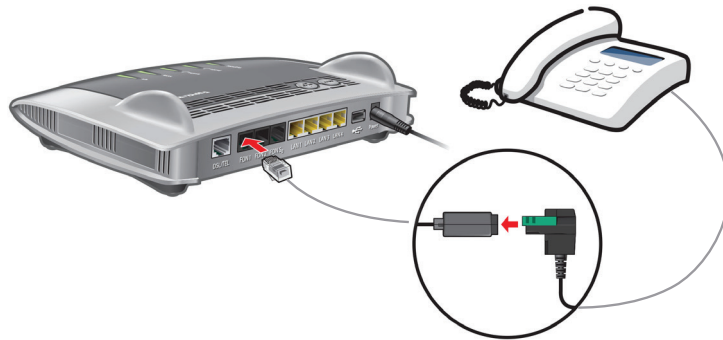

4

Connect your computer to the FRITZ!Box with a LAN cable to the LAN Port or connect your computer wirelessly via WLAN.

LAN

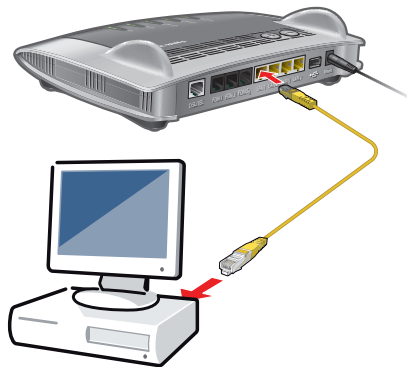

WLAN/WiFi

