


 Please remember: your modem/router must always be switched on to enable your telephone to work.

- 1** Connect one end of the provided Ethernet cable to the Internet (blue) port. Connect the other end directly to your broadband modem/router.
- 2** Connect one end of a phone cable to the "Phone 1" (gray) port. Connect the other end to your analog phone.
- 3** Connect the provided power adapter to the "Power" port.

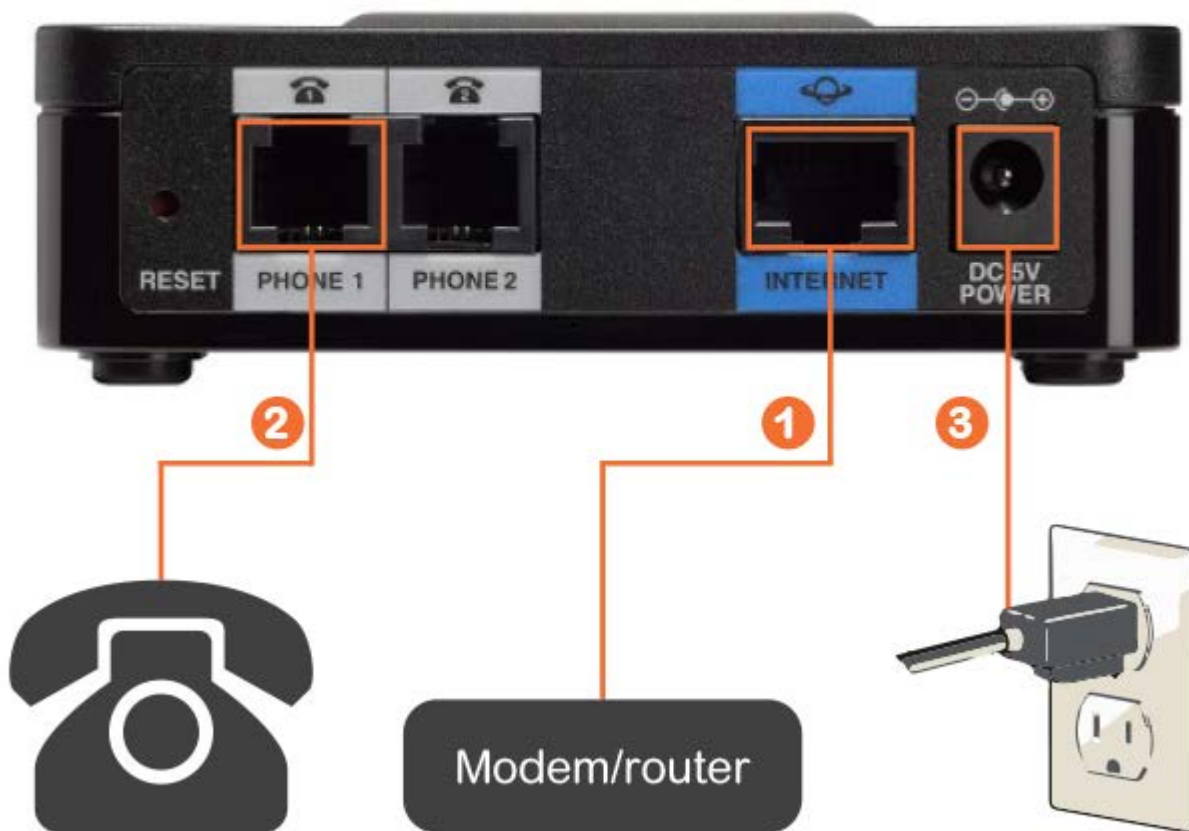

* You can find more information on the guide provided with the CISCO adapter.